





EXPLODED VIEW EXPLOSIONSANSICHT VUE ÉCLATÉE

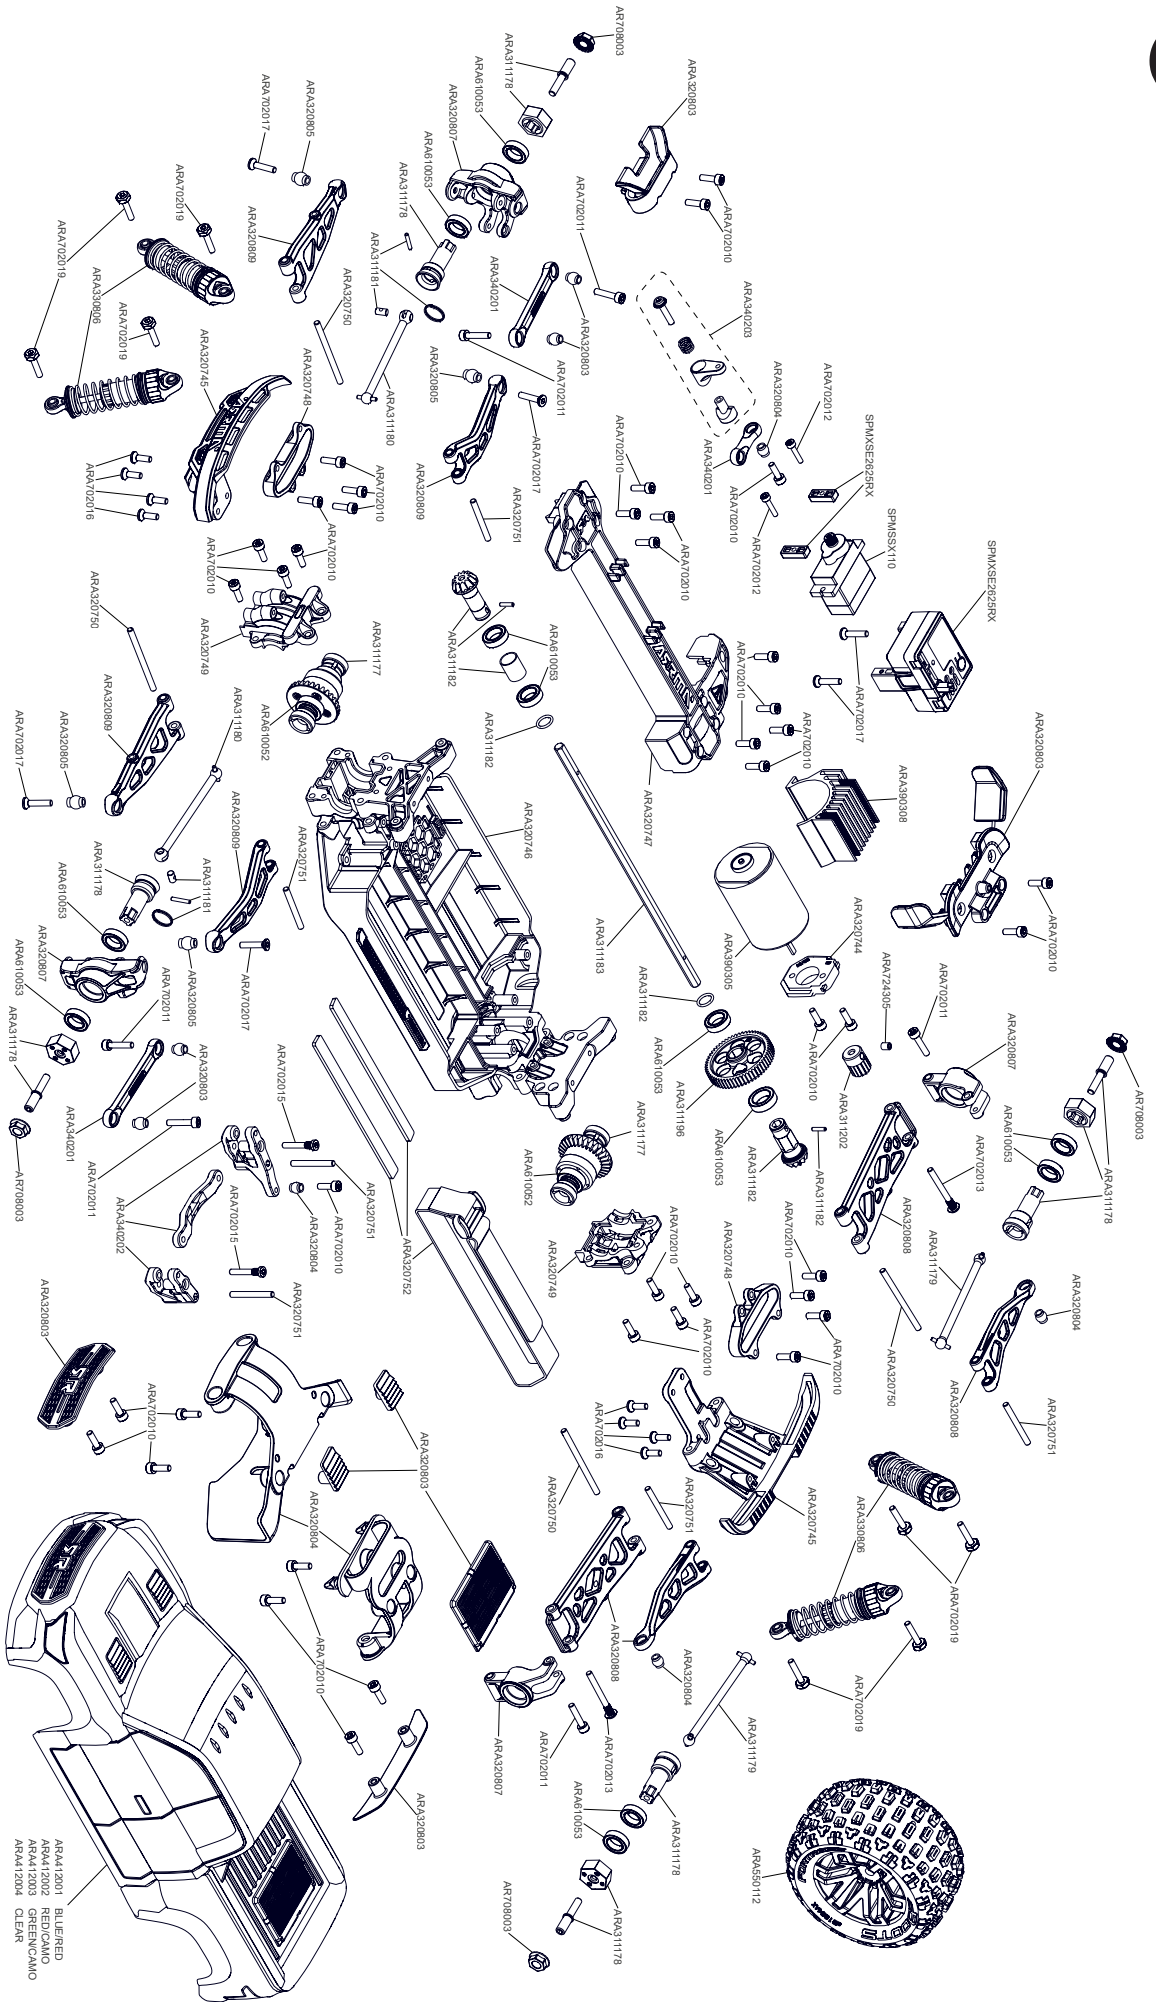


ARA41201 BILBERED
ARA41202 RED/CAMO
ARA41203 GREEN/CAMO
ARA41204 CLEAR

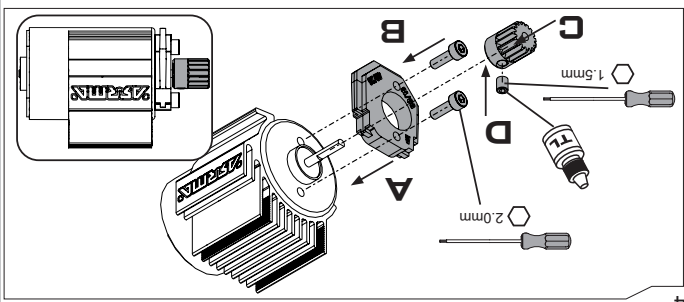


4


ARA311208	Pinion Gear 22T MOD 0.5 CNC
ARA311207	Pinion Gear 21T MOD 0.5 CNC
ARA311206	Pinion Gear 20T MOD 0.5 CNC
ARA311205	Pinion Gear 19T MOD 0.5 CNC
ARA311204	Pinion Gear 18T MOD 0.5 CNC
ARA311203	Pinion Gear 17T MOD 0.5 CNC
ARA311202	Pinion Gear 16T MOD 0.5 CNC

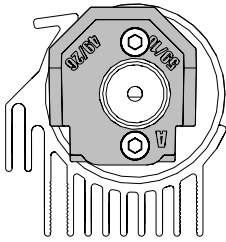


Motor Mount Chart		Motormontagetabelle		Tableau de montage du moteur	
Pinion Gear Ritzel Pignon		Spur Gear Striradgetriebe Engrenage droit		59 Tooth	
A	C	E	G	I	K
16	17	18	19	20	21
22					

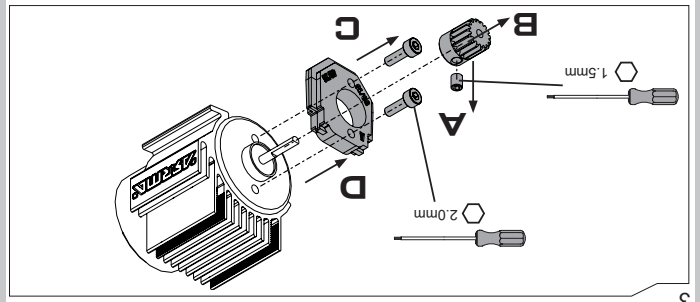

3

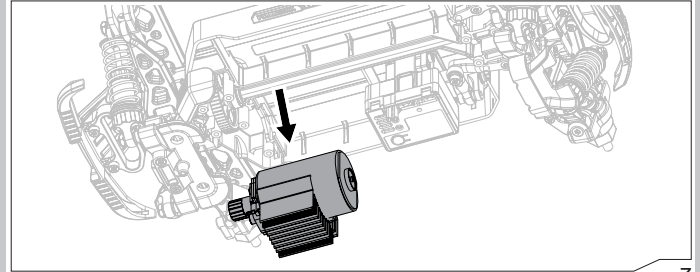

2



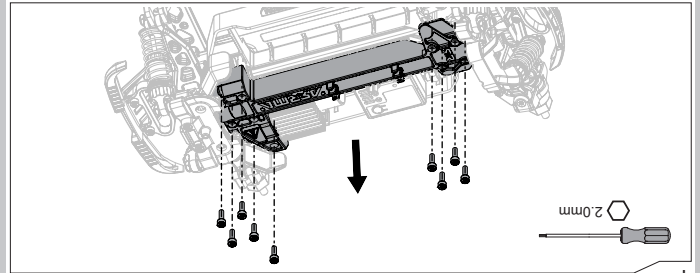


1

Change the Pinion / Motor. Wechselt man das Motorritzel/Motor. Changez le Pignon / Moteur.

How To... Wie... Comment...

How To... Wie... Comment...
Remove and install the Body Entfernen und installieren Sie das Gehäuse Retirer et installer le corps

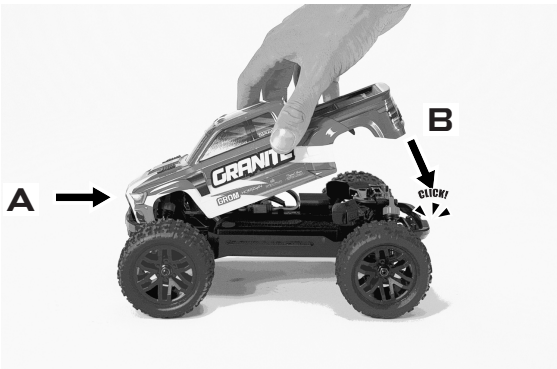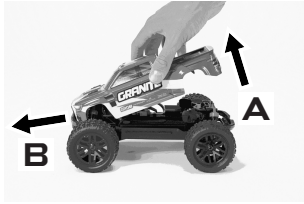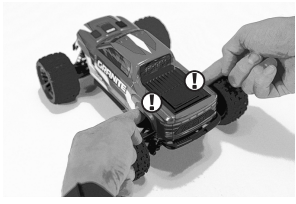

ARRMA

GRANITE GROM

**TECHNICAL PACK!
TECHNISCHES PACK!
PACK TECHNIQUE!**

