


6 Exploded View *Vue éclatée* Explosionszeichnung 展開図

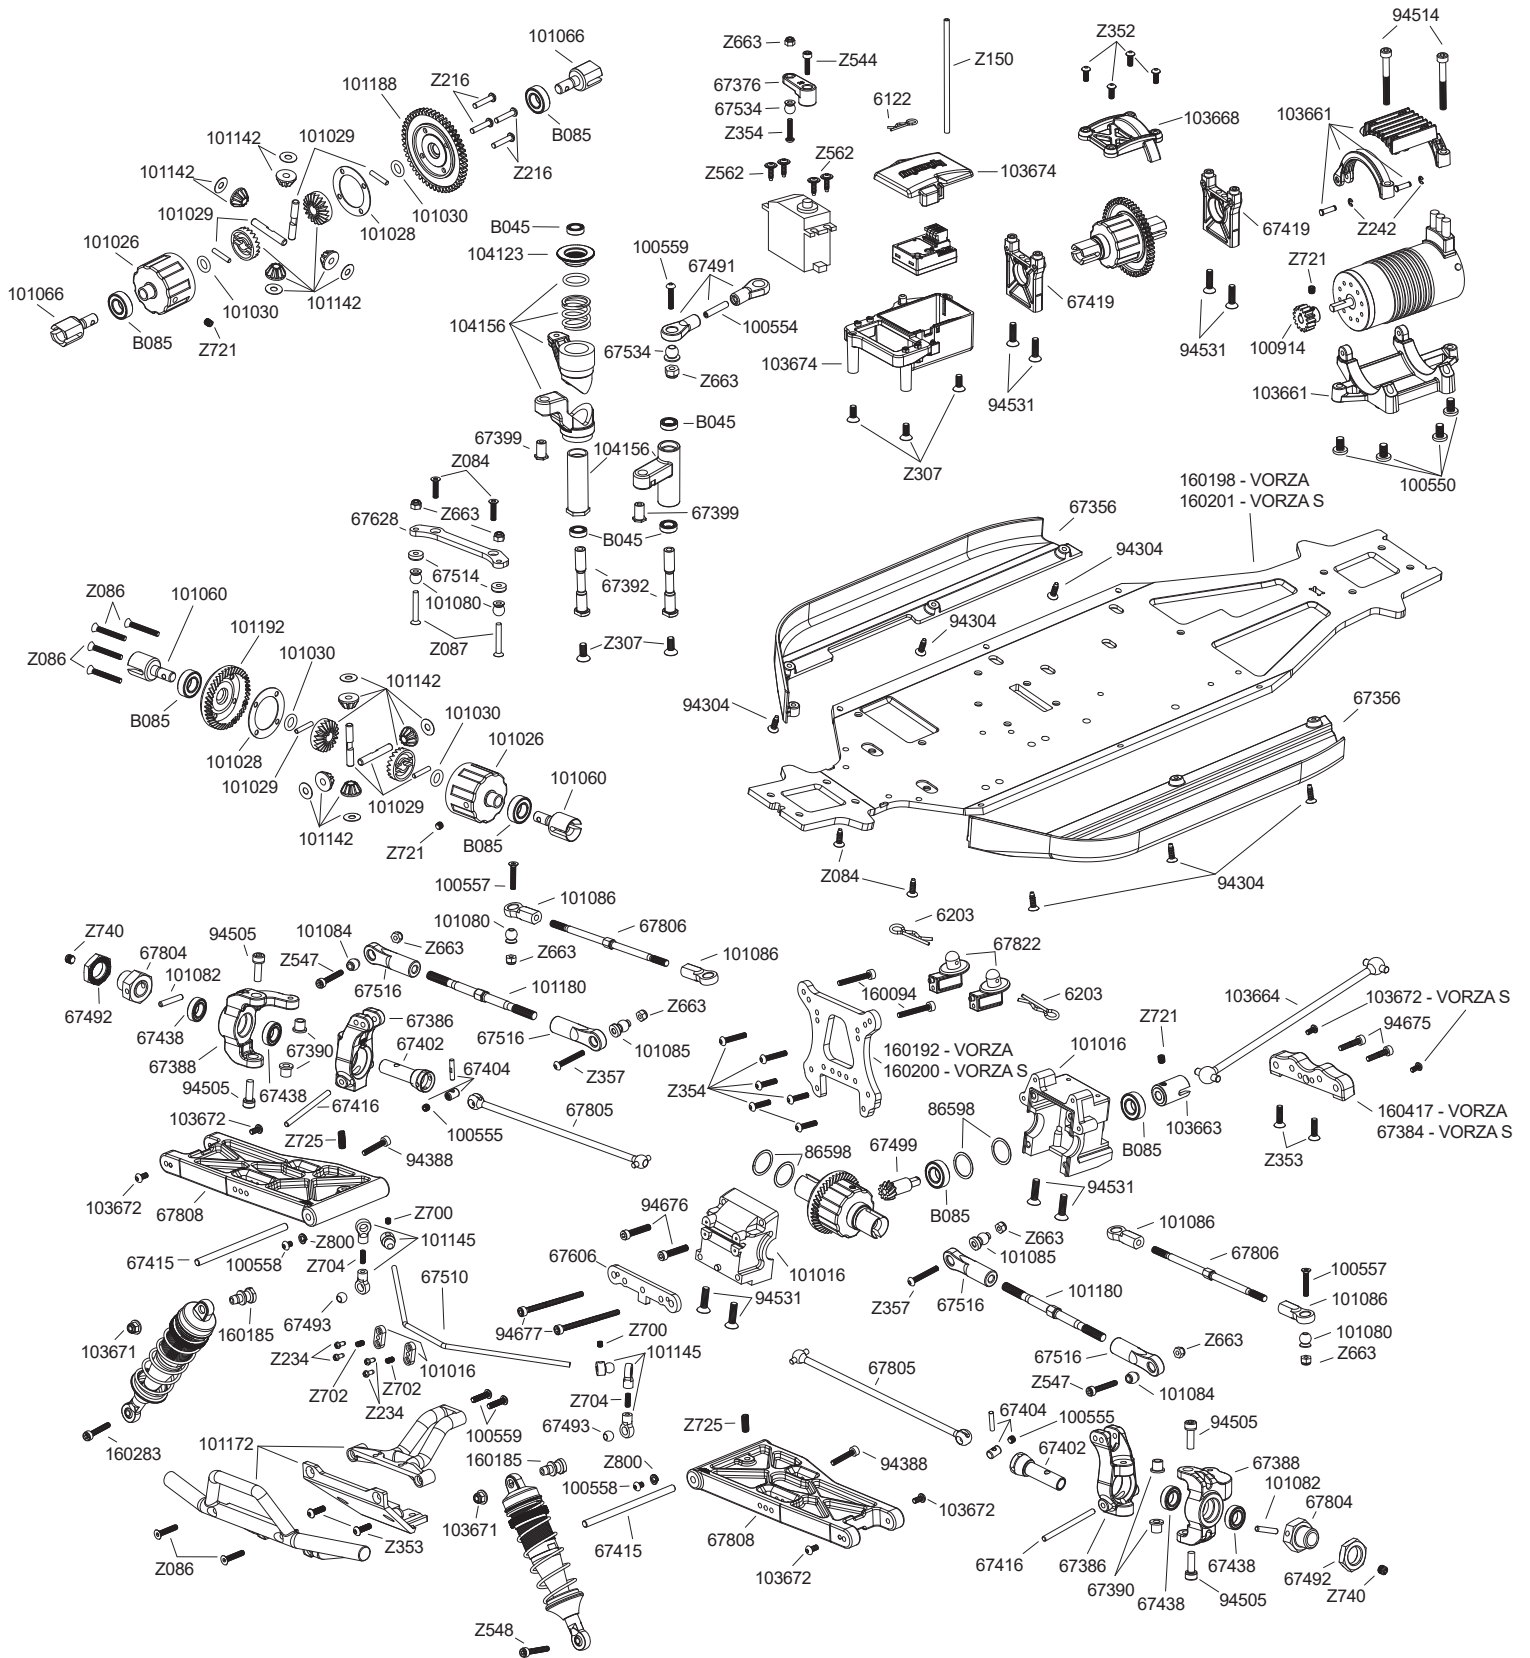




67167 23 / AIRTRONICS / JR / KO / SANWA
67168 24 / HITEC
67169 25 / HPI / FUTABA
HB ALUMINUM STEERING SERVO HORN



67190
LIGHT WEIGHT SPUR GEAR 48 TOOTH



67428 - Spur Gear 48 Tooth
101034 - SPUR GEAR 46T
101035 - SPUR GEAR 44T

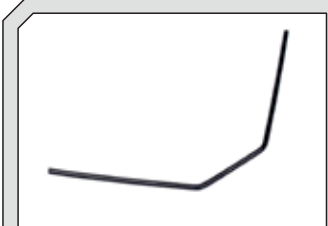


67511
Sway Bar (2.4mm)



68184
SUSPENSION SHAFT (OUTER/THREADED)




68188
SWAY BAR SET (2.0,2.2,2.4,2.6mm/Short)

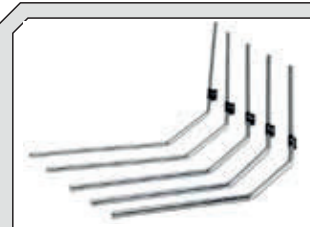

68191
SWAY BAR SET (2.2,2.4,2.6,2.8,3.0mm/
Long)



107446
SHOCK GUARD SET

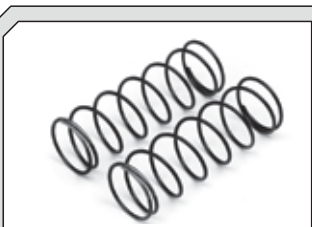

109806 - SHOCK SPRING
(GREEN/68mm/60.8gF/2pcs)
109809 - SHOCK SPRING
(YELLOW/68mm/73.8gF/2pcs)
109810 - SHOCK SPRING
(GOLD/68mm/79.6gF/2pcs)
109811 - SHOCK SPRING
(RED/68mm/86.1gF/2pcs)



160289 - VORZA BODYSHELL CLEAR
160294 - TRIMMED & PAINTED VORZA
TRUGGY FLUX RED BODY (NO DECALS)
160296 - TRIMMED & PAINTED VORZA S
TRUGGY GREEN BODY (NO DECALS)
160300 - TRIMMED & PAINTED VORZA 4.6
TRUGGY ORANGE BODY (NO DECALS)



160328
ALUMINUM REAR HUB CARRIER SET



160329
ALUMINUM FRONT SPINDLE CARRIER SET (10 DEGREES)




160330
ALUMINUM FRONT SPINDLE SET






67379
Pivot Plate (RR/3deg) - 7075

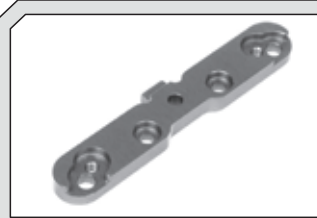

67380
Pivot Plate (RF/3deg) - 7075

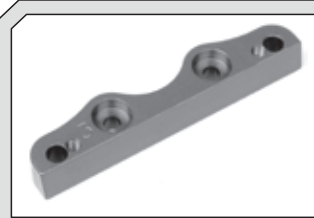

67384
Front Suspension Block (FR)
- 7075



67391
Front Suspension Block (FF)
- 7075



67398
Steering Plate - 7075



67433 - Aluminum Big Bore Shock Cap
67528 - Big Bore Shock Spring Adjust Nut
67528 - Big Bore Shock Spring Adjust Nut



109829
ALUMINUM BIG BORE SHOCK SET
(106mm/2pcs)




109831
HD SHOCK SHAFT (29mm STROKE/2pcs)



109832
SHOCK BOOT (29mm STROKE/2pcs)



160199
Rear Shock Tower 7075
160200
Front Shock Tower 7075

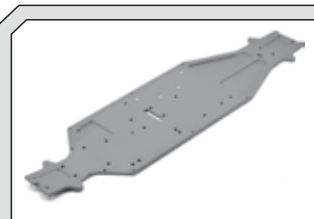

160201
MAIN CHASSIS FLUX TRUGGY 7075
4.0mm

