

# killerbody™

## LIGHT BUCKET

NO.48041

● Symbols used throughout the instruction manual, comprise:



Cut off shaded portion.



5mm  
Drill holes with  
the specified diameter.




Pay close attention here!



Must be purchased  
separately.




Assemble left and right sides  
the same way.

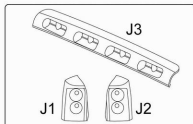

▶ Please tape the wiring, etc. on the body using the attached aluminum tape.

▶ Please put the attached aluminum tape on the top and bottom of the headlight and the taillights.




Install 1 Yellow LED & 1  
Red LED  
NO.48103  
LED Light System  
W/Control Box (18 LEDs)





Install 2 Yellow LEDs & 2  
Red LEDs  
NO.48103  
LED Light System  
W/Control Box (18 LEDs)

### LED STOPPER

- ..... 8
- 2 x 7mm F/H TP Screw
- ..... 8



Tape up  
an aluminum tape.

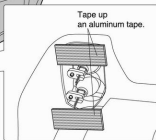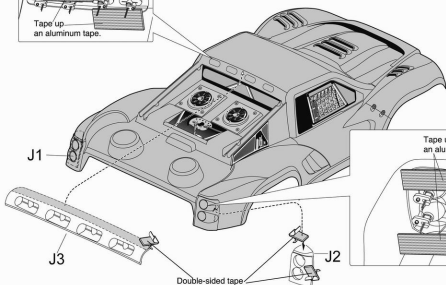

Tape up  
an aluminum tape.