




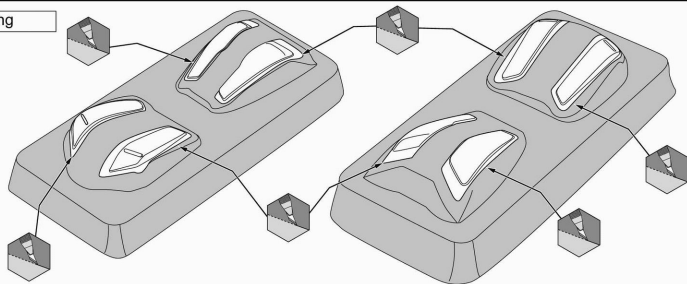


● Symbols used throughout the instruction manual, comprise:

-  Cut off shaded portion.
-  5mm Drill holes with the specified diameter.
-  Pay close attention here!
-  Must be purchased separately.
-  Assemble left and right sides the same way.

1 Cutting





2 Cleaning

Use a neutral detergent to remove any oil residues and dirt.




3 Cutting

Cutting the headlights and taillights

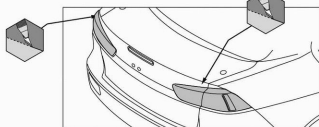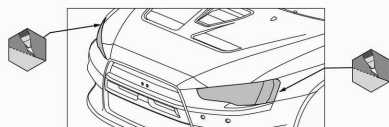


4 Assembling


2 x 7mm FH TP Screw
LED STOPPER X13
----- 14

 Please tape the wiring, etc. on the body using the attached aluminum tape.


< Front >

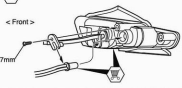

2x7mm

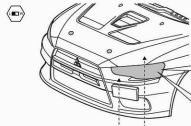


Double-sided tape

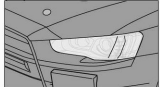


Assembled


< Rear >

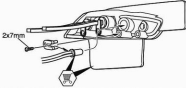

2x7mm

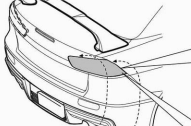

Double-sided tape



Assembled

Tape up an aluminum tape.