


#81312 - Low Visibility Wheelie Bars for the Traxxas Slash 2wd & 4x4

What's Included: 1 - tree (containing 1 - Left & 1 - Right Wheelie Bar Bracket and 2 - Nylon Wheels), 4 - M3 x 25mm buttonhead screws, 2 - M3 x 16mm buttonhead screws, 4 - #4 washers, 2 - 3mm locknuts and 2 aluminum bushings.

Required: You must have an **RPM** rear bumper for a Slash 2wd or Slash 4x4 (not included) in order to install **RPM** Low Visibility Wheelie Bars. They will not work with a stock Traxxas or any other aftermarket manufacturer's bumper.

Before You Begin: Identify and carefully trim the 4 parts on the parts tree. Refer to the illustration for the correct orientation of the two wheelie bar brackets, taking note of the placement of the hex nut in relation to the bumper.

Installation: Slip a 3mm locknut in the hexagonal opening in each

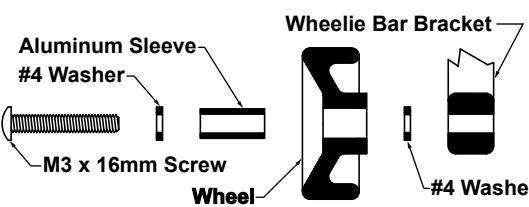

of the two wheelie bar brackets. Now install the screw assembly through the wheels and into the wheelie bar bracket in exactly the following order - M3 x 16mm buttonhead screw/ #4 washer/ aluminum sleeve/ **RPM** Wheel/ #4 washer/ **RPM** Wheelie Bar Bracket/ 3mm locknut. **Caution: The smooth, flat side of the #4 washers should face towards the wheel.**

Do not over-tighten the screw since the wheel needs to rotate freely. Once both wheels are installed, bolt the **RPM** wheelie bar brackets to your **RPM** rear bumper using the included M3 x 25mm screws. The **RPM** wheelie bar can be used with or without **RPM** mud flaps in place. If you have or are installing **RPM** mud flaps (**RPM** #81012), remove the screws that attach the mud flaps to the **RPM** bumper support, place the wheelie bar bracket **between** the mud flap support arm and the **RPM** rear bumper support (best position) or, if the mud flaps hit the body, the wheelie bar bracket may be placed to the outside of the mud flaps, then secure with the included M3 x 25mm screws.

