



#70292 & #70293 - Through-the-Body Mock Exhaust Tips


What's Included: 2 - Pipes,
2 - Flanges, 2 - Backing
Plates & 2 - M3 x 8mm
Flathead Screws.

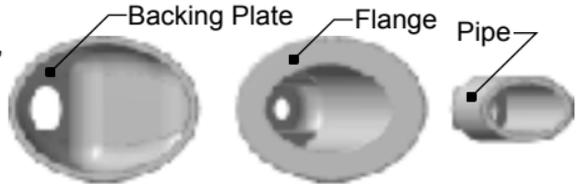

- Installation:** **1)** Decide where you would like to locate your new Through-the-Body Mock Exhaust Tips on your vehicle. Typical locations are either in front of or behind the rear tires, *where there are minimal body contours*.
- 2)** Once you decide on a location, cut out the body hole templates below (**Caution: leave room around the outside for tape**) and, using a pushpin or tack, press the pin through the cross in the center of the template into the body. Rotate the template to your liking and, once you're satisfied with the orientation, tape the edges in place, then remove the pin.
- 3)** Make sure there is **at least 3/8" of clearance** from any obstructions between the body and the chassis which may interfere after final assembly. □
- 4)** **Cut out the center of the template and the body**, using extreme caution not to extend the cut beyond the edges of the template. It's best to stay away from the edges. You can always cut more later if you need to.
- 5)** Trim the parts of the mock exhaust tips from the parts tree and then slip the **Flange** through the body *from the outside*. The shallow side on the inside of the **Flange** should orient towards the front of the vehicle.
- 6)** Slide the **Pipe** in place. The flats on the bottom will key with the **Flange**.
- 7)** From the inside of the body, slip the **Backing Plate** in place. The holes should line up through all 3 pieces.
- 8)** From the inside of the body, carefully thread the included M3 x 8mm flathead screw in place (please see the drawing to the lower left for the proper sequence). **Do not over-tighten the screw!** It is a cosmetic part and does not need to be held too tightly.

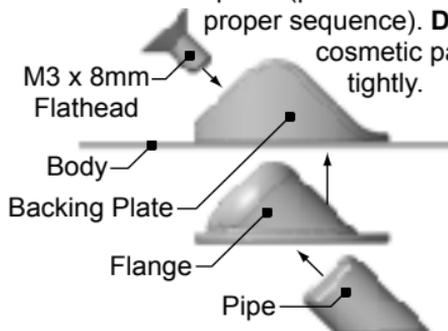

**Body Hole
Template**

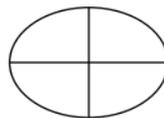

**Body Hole
Template**

